
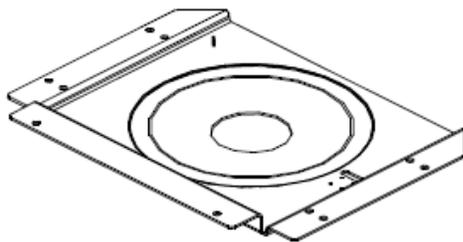


Installation Guide

Kit Installation (PN: 6773)

Seat 8792

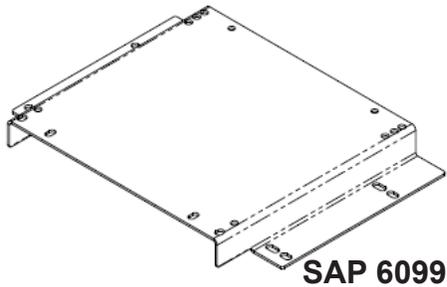

Original Suspension
Swivel Top Plate

1. Remove original seat top from swivel
2. On new seat, remove seat cushion by removing the screws under the front lip that hold the seat cushion to the frame.
3. Attach the SAP 6099 to the seat bottom with four 5/16-18 bolts and flange nuts. **NOTE:** Side cut outs on SAP 6099 face forward (see image).
4. Attach 6099 plate and seat assembly to original swivel top with four 5/16-18 bolts and flange nuts.
5. **OPTION 1** - Take the LH armrest of the original seat and mount to new seat in same way using the two bolts the hold the armrest to the seat top.

OPTION 2 - Use a Phillips head screw driver to unscrew the front of the LH armrest cover and take the cover off. Cut the square indentation that is on the armrest out. Insert original switch into the square that was cut out. Route the hose/wires through the back of the armrest and reconnect armrest. Use a Phillips head screw driver to re-install the armrest cover.